


- STEP 1 : HOLE IN SWING KEEL SHOULD BE 1" ROUND. IF IT IS ELONGATED OR BIGGER THAN 1 1/8" IT SHOULD BE FILLED UP WITH WELD AND REDRILLED TO 1" DIA.
- STEP 2 : A STRAP MAY BE WELDED ALONG THE LEADING EDGE AS IN (A) — OR — 3/16" PLATE MAY BE WELDED TO BOTH SIDES AS IN (B) — OR — BOTH

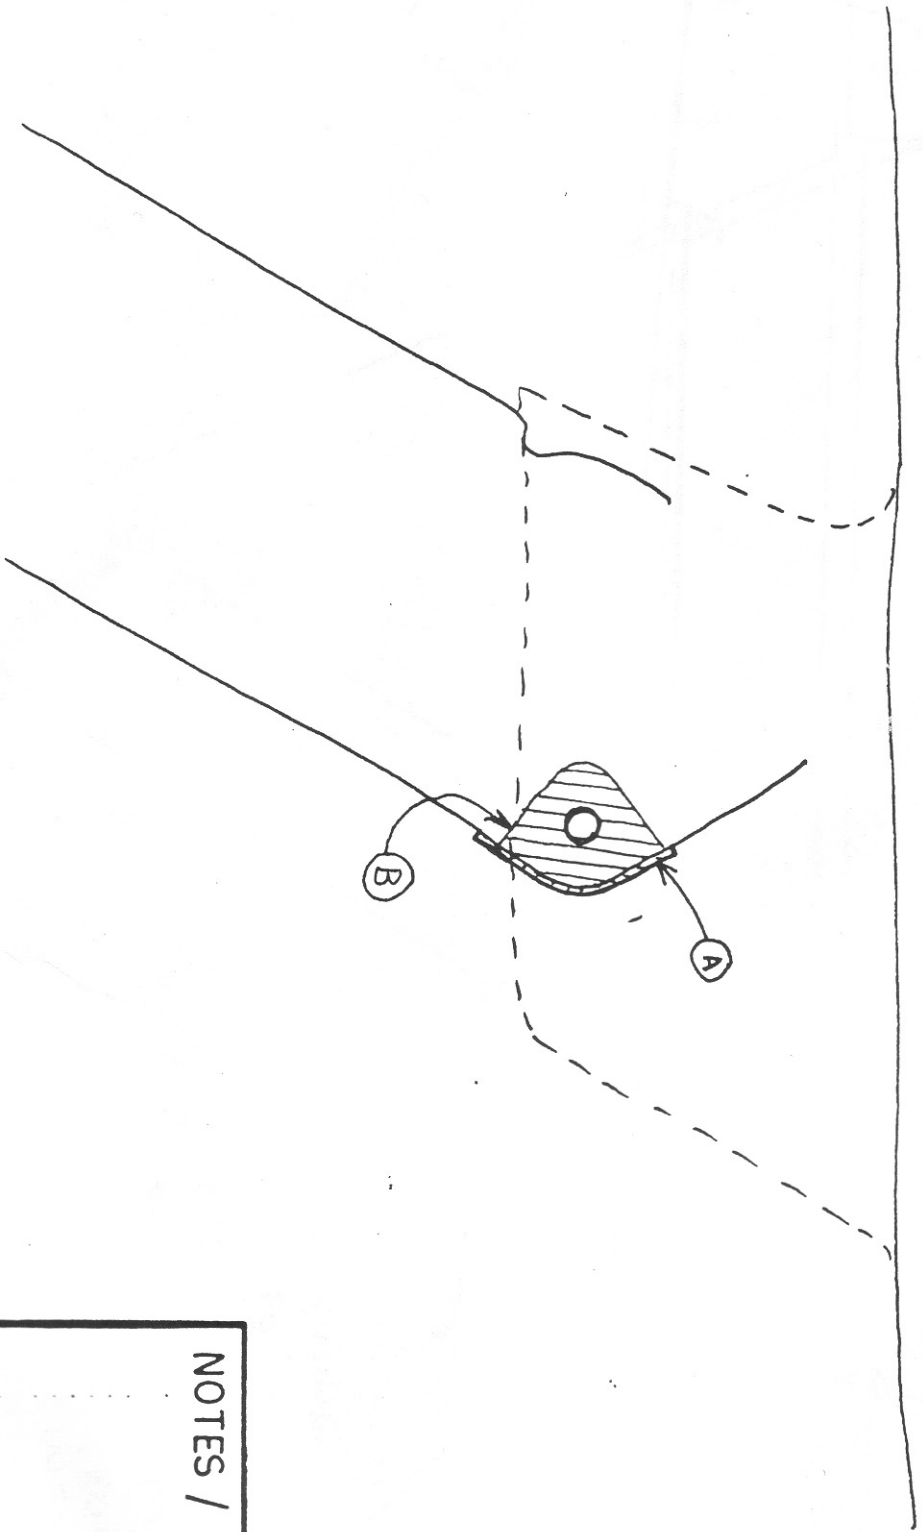

NOTES / MATERIALS:

W. D. SCHOCK CORP.
SANTA ANA, CA. 549-2277

SANTANA 21
SWING KEEL REPAIR

DESIGN: SCX
DRAWING: SCX

DRAWING # 11/10/81
REV. DATE: